

Auto

Service Instructions



BLAUBERG Company is happy to offer your attention a new generation product, the BLAUBERG Auto fan.

The solid team of high-qualified professionals with many years of working experience, technological innovations in design and production, high-quality components and materials from the top worldwide producers have become the precondition for the best fan in its class.

INTRODUCTION

The present service instruction contains a technical description, technical data sheets, operation and mounting guidelines, safety precautions and wirnings for safe and correct operation of the fan BLAUBERG Auto.

USE

The BLAUBERG Auto fan is designed for exhaust ventilation of residential and public premises liested during winter season. The fan is designed for wall or ce (inc) mounting (fig. 3-5). The fan is equipped with automatic shuttors to prevent air back drafting during the fan standby.

COMPLETE SET

fan - 1 item; screws and dowels - 4 items; plastic screwdriver (for the models with timer) - 1 item; service instruction; packing box.

The fan design is regularly improved, so some models can slightly differ from those ones described in this service instruction.



BASIC CHARACTERISTICS

The fan designations, parameters, outer view, overall and connecting dimensions are shown in tables 1, 2, 3 and in fig. 1 and 2.

Table 1

| Туре | Max. air flow [m³/h] | Power [W] | RPM [min ⁻¹] | Noise level, 3 m [dBA] |
|----------------|-------------------------|-----------|--------------------------|---------------------------|
| Auto 100 | 98 | 18 | 2300 | 34 |
| Auto 125 | 185 | 22 | 2400 | 35 |
| Auto 150 | 295 | 26 | 2400 | 39 |
| Auto Still 100 | 78 | 7,9 | 1715 | 26 |
| Auto Still 125 | 152 | 11,8 | 1930 | 31 |
| Auto Still 150 | 242 | 22,8 | 1904 | 35 |

Table 2

| Туре | Switch | Timer | Humidity sensor | Motion sensor |
|---------|--------|-------|--------------------|------------------|
| Auto | | | | |
| Auto S | • | | | |
| Auto T | | • | | |
| Auto ST | • | • | | |
| Auto H | | • | • | |
| Auto SH | • | • | * | |
| Auto IR | | • | | • |

Switch (S) - built-in pull cord switch;

Timer (T) - turn-off time range from 2 to 30 min;

Humidity sensor (H) - humidity level range from 60% to 90%;

Motion sensor (IR) - reach distance from 1 to 4 m and sensor viewing angle up to 100°.

The fan does not cause interference with radio-, TV- or videoequipment.

Service life is not less than 5 years.




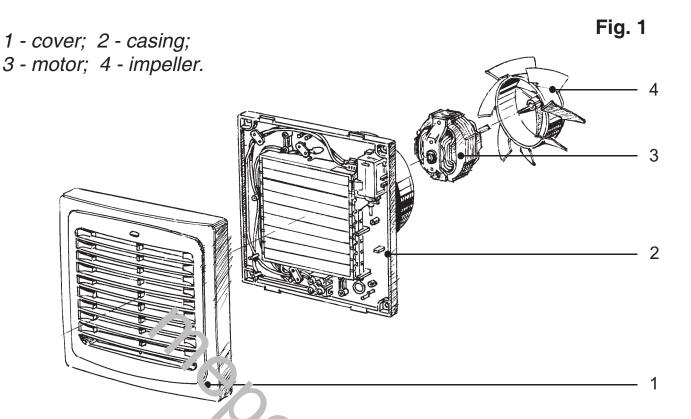


Table 3 Dim Jasions [mm] Weight Type **3**? [kg] b1 **b2** d a е 150 0,56 150 90 166 100 30 **Auto 100** 150 97 33 0,73 **Auto 125** 186 128 173 174 125 **Auto 150** 115 150 34 0,9 210 150 195 196



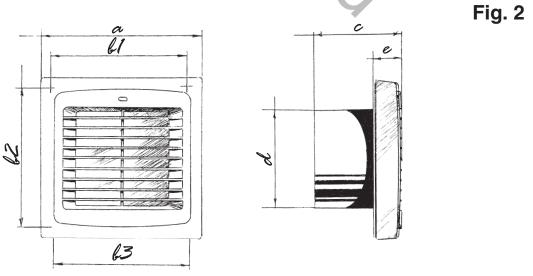

OPERATION RULES

The fan is rated for connection to 220...240 V / 50 Hz power mains and is designed for continuous operation always connected to power mains.

The air motion direction in the system must match the pointer on the fan casing.

The fan is rated for operation at ambient temperature from +1 °C up to +45 °C.

The fan does not require grounding.

SAFETY RULES

All operations related to the fan electrical connections, servicing and repair works are allowed only after the fan disconnection from power mains.

All mounting and servicing operations are allowed for duly qualified electricians with valid electrical work permit for electric operations at the units up to 1000 V after careful study of the present user's manual.

The single-phase power grid must comply with the acting local electrical norms and standards. The fixed electrical witing must be equipped with an automatic switch that is used for connection of the fan to power mains with gap on all poles at least 3 mm

Make sure the impeller and the casing are not damaged before starting installation. The casing internals must be free of any foreign objects which can damage the impeller blades.

Misuse of the product or any unauthorized modification are not allowed.



The product is not allowed for use by children and persons with reduced physical, mental or sensory capacities, without proper practical experience or expertise, unless they are controlled or instructed on the product operation by the person(s) responsible for their safety.

Supervise the children and do not let them play with the product. Take steps to prevent ingress of smoke, carbon monoxide and other combustion products into the room through open chimney flues or other fire-protection devices. Sufficient air supply must be provided for proper combustion and exhaust of gases through the chimney of fuel burning equipment to prevent back drafting. The maximum permitted pressure difference per living units is 4 Pa. Operating medium must not contain any dust or other solid impurities, sticky substances or fibrous materials.

The fan is not rated for operation in a media that contains hazardous or explosive materials and vapours, i.e. spirits, gasoline, insecticides, etc.

Do not close or block the far intake or exhaust vent not to disturb the natural air passage. Do not sit on the fan and do not put objects on the fan.


Follow the guidelines of this service in structions to ensure durable operation of the product.




MOUNTING AND SETUP

The fan is designed for ceiling or wall mounting to extract air into a ventilation shaft or matching air duct of respective diameter (fig. 3-7).

The fan mounting sequence is shown in fig. 8-9. The fan wiring diagrams are shown in fig. 10-16.

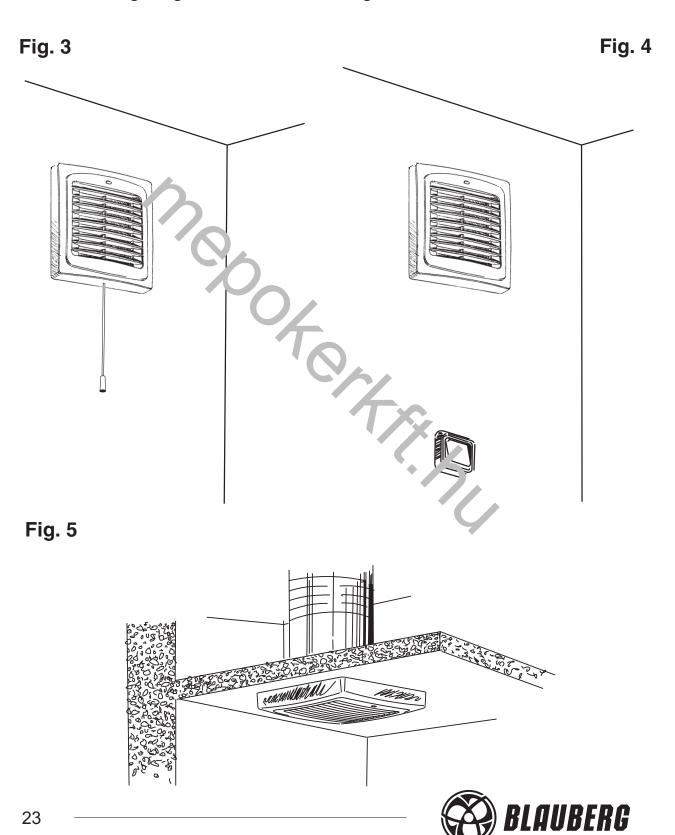

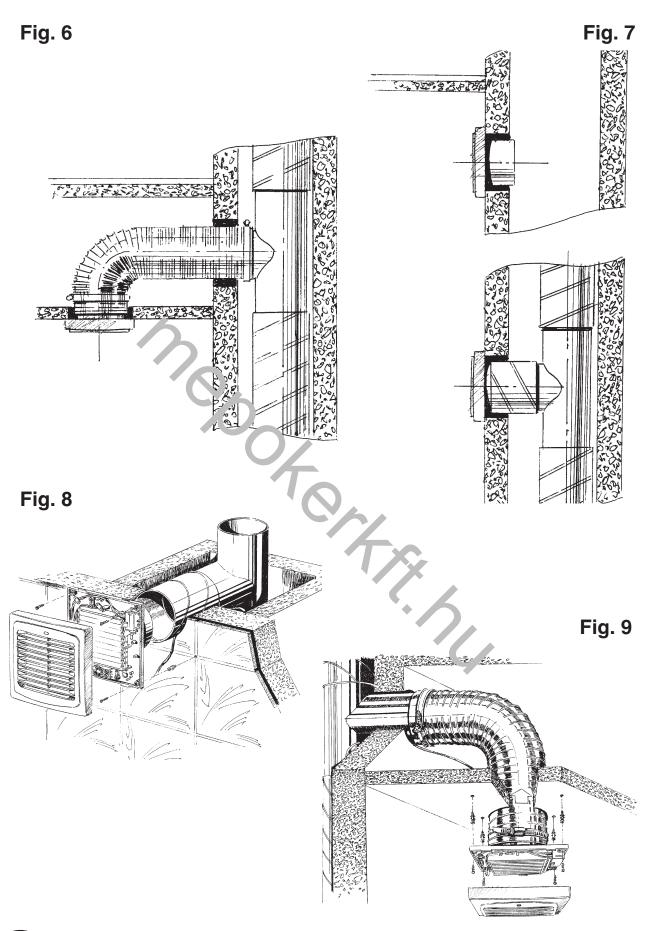





WIRING DIAGRAMS AND FAN OPERATING LOGIC


Auto 100

Fig. 10




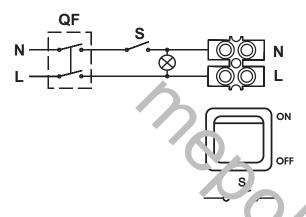

S - external switch QF - automatic switch

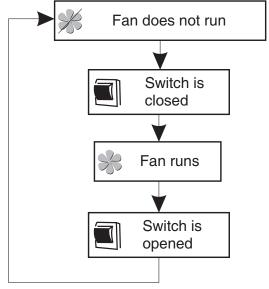

Auto 100 S




QF - automatic switch

Fig. 11 Fan does not run Pull cord switch Fan runs Pull cord switch




Fig. 12 **Auto 100 T**

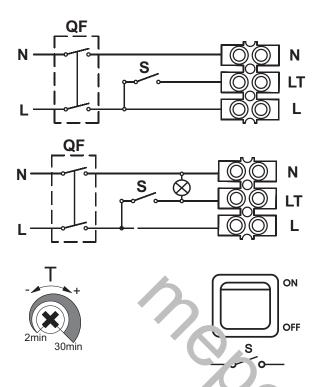

Fan does not run Switch is closed Fan runs Switch is opened Turn-off delay timer starts (2 to 30 min)

S - external switch QF - automatic switch

Auto 100 ST

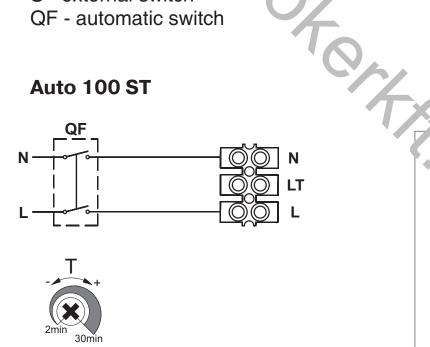


QF - automatic switch

Fan does not run Pull cord switch Fan runs Pull cord switch Turn-off delay timer starts (2 to 30 min)




Fig. 13

Auto 100 H Fig. 14

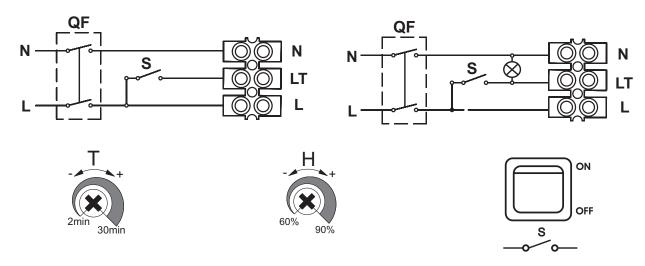


S - external switch

QF - automatic syntch

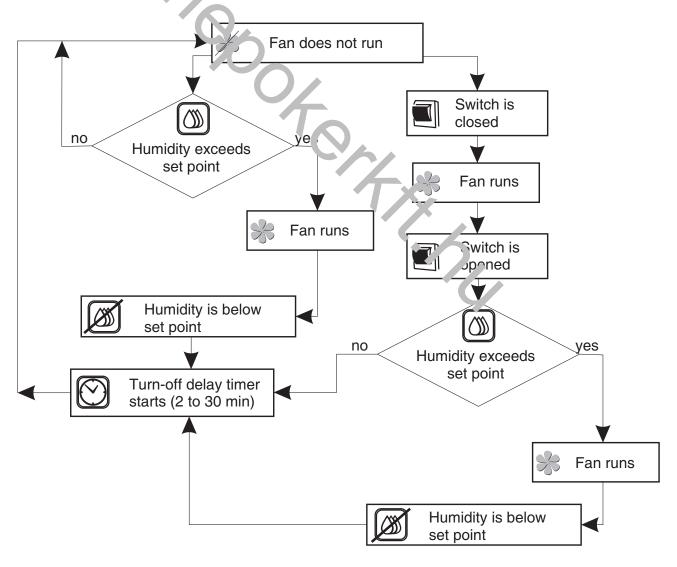




Auto 100 SH Fig. 15

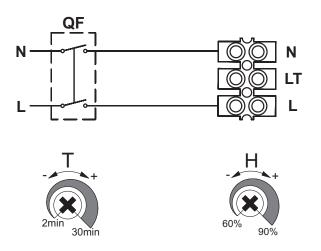


QF - automatic switch

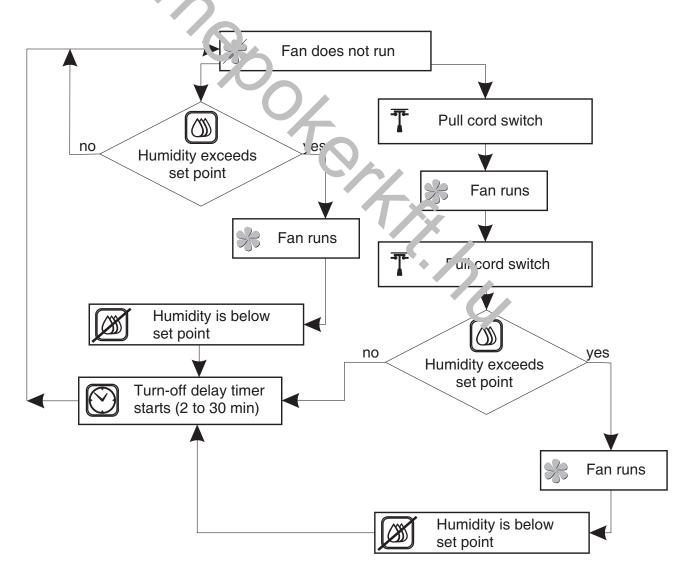



Auto 100 IR Fig. 16





QF - automatic switch

Warning!

The timer circuit is under mains voltage!

Disconnect the fan from power mains prior to any adjustment operations.

The fan delivery set includes a specially designed plastic screwdriver for fan settings adjustments.

Use the screwdriver to alter the turn-off delay time threshold.

Do not use a screwdriver, knife, etc. for adjustment operations not to damage the circuit board.


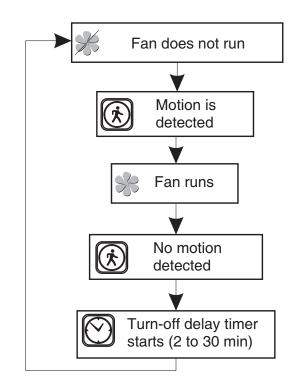


Fig. 17



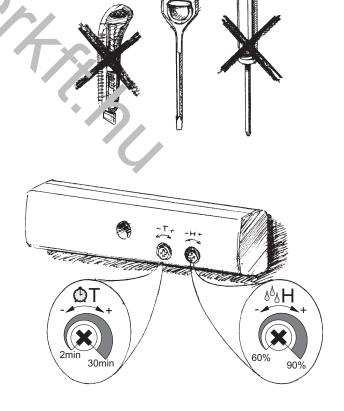

MAINTENANCE

Any servicing and maintenance operations of the fan are allowed after it is disconnected from power mains only.

Maintenance means regular cleaning of the fan surfaces from dirt and dust. To clean the fan, wipe its surfaces with a cloth wetted in a mild soap solution, then wipe the surfaces dry.

Avoid water dripping on the motor and circuit board!

STORAGE AND TRANSPORTATION RULES

Transportation is allowed by any transportation vehicle provided that the product is in the manufacturer's original package.

Store the delivered product in the manufacturer's original packing box in a dry ventilated premise with the ambient temperature from +5°C up to + 40°C and relative humidity less than 80%.

The storage environment must be free of dust, acid or alkali vapours to prevent corrosion

DISPOSAL

Do not dispose in domestic was e. The unit contains in part material that can be recycled and in part such ances that should not end up as domestic waste. Dispose of the unit crice it has reached the end of its working life according to the regulation a ralid where you are.

MANUFACTURER'S WARRANTY

The fan complies with the requirements according to the EU norms and directives, to the relevant EU-Low Voltage Equipmer. Directives, EU-Directives on Electromagnetic Compatibility.

We hereby declare that the following product complies with the essential protection requirements of Electromagnetic Council Directive 2004/108/EC, 89/336/EEC and Low Voltage Directive 2006/95/EC, 73/23/EEC and CE-marking Directive 93/68/EEC on the approximation of the laws of the Member States relating to electromagnetic compatibility. This certificate is issued following test carried out on samples of the product referred to above. Assessment of compliance of the product with the requirements relating to electromagnetic compatibility was based on the following standards.



Protection degree index according to IP rating against access to hazardous parts and water ingress - IP24.

The manufacturer hereby warrants normal operation of the fan over the period of five years from the retail sale date provided observance of the installation and operation regulations.

In case of failure due to faulty equipment during the warranty period the consumer has the right to exchange it.

If case of no confirmation of the sale date, the warranty period shall be calculated from the manufacturing date.

The replacement is offered by the Seller.

The MANUFACTUPER shall not be liable for any damage resulting from any misuse of or gross mechanic interference with the fan.

Please follow the applicable instructions.

| WARRANTY CAF | RD |
|--------------|----|
| | Tx |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |





Auto

Auto Still

| | <i>T</i> |
|-----|-----------|
| | Н |
| 100 | ST |
| 125 | SH |
| 150 | <i>IR</i> |

5

model is recognized as serviceable.

SALES DATE

SOLD

MANUFACTURED ON (OATE):

APPROVAL MARK